


RCI 16+ TOYOTA TACOMA DITCH LIGHT BRACKET KIT INSTALLATION GUIDE

This install guide is applicable our 16+ Toyota Tacoma Ditch Light Bracket kit ONLY

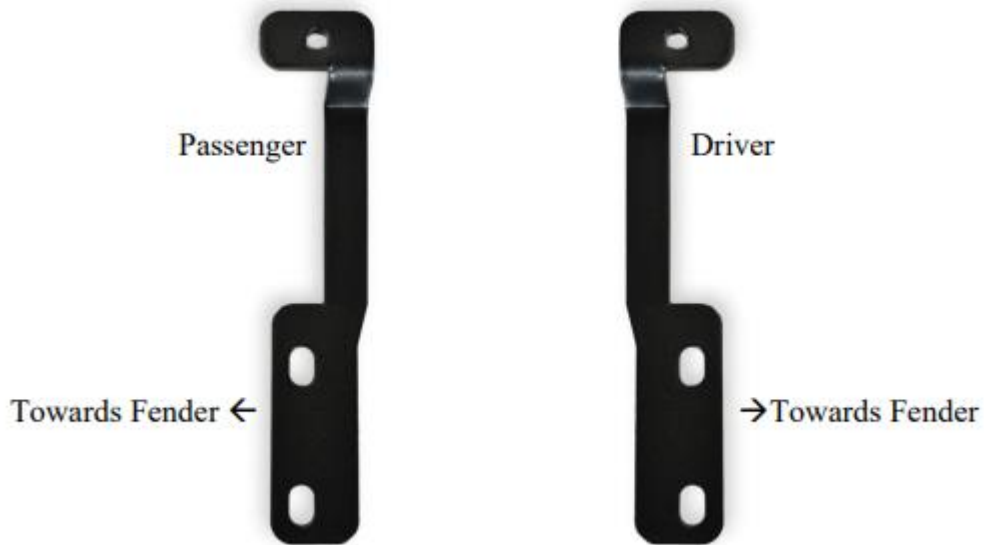

TOOLS REQUIRED:

Description
3/8" or 1/2" Socket Wrench and Socket Set
Metric Box-End Wrenches

INCLUDED COMPONENTS:

Item	Description	QTY
C1.	Driver Side Ditch Light Bracket	1 ea.
C2.	Passenger Side Ditch Light Bracket	1 ea.

INSTALLATION STEPS:

- 1) Begin by unpacking and removing all components and hardware. Please verify that all hardware, components, and mounting components are present. Please reference your original order invoice and verify all items are accounted for.
- 2) The Ditch Light Bracket kit will include a driver and passenger side bracket. These brackets are side specific. Installation of the brackets is quite simple and recommend installing one side at a time. This kit will use all OEM hardware on the vehicle.

- 3) Release the vehicle hood and fully open it. Beginning with the passenger side of the vehicle, remove the bolt closest to the vehicle grille, securing the hood to the hinge. Leave the bolt closest to the windshield installed and tight.
- 4) Attach the bracket for the passenger side with the forward mounting hole in position over the removed bolt location. Replace the bolt for the hinge while keeping it loose enough to allow movement of the Passenger Side Ditch Light Bracket(C2).
- 5) Remove the second hinge bolt, closest to the windshield, and allow the Passenger Side Ditch Light Bracket(C2) to pivot into position. Thread the bolt back into its OEM location and hand tighten.
- 6) Before final tightening, position the bracket forward or back based on dimensions of the auxiliary lights you plan to use. Slowly lower vehicle hood by hand and ensure proper fitment/clearance of bracket/lights. Tighten both bolts to hand tool tight.
 - a. **PLEASE NOTE:** Hand tool tight for these bolts should be more than sufficient to hold the bracket and vehicle hood in place. **DO NOT OVERTORQUE.** Over torquing of these bolts may result in stripping the sheet metal threads of the inner hood skin.
- 7) Repeat steps 3-6 for the Driver Side Ditch Light Bracket(C1).
- 8) Install auxiliary lighting of your choice!
 - a. **PLEASE NOTE:** The mounting point for lighting on these brackets is cut to a standard size common in most lighting. For larger mounting hardware, drilling to expand the hole may be necessary. Add touch up paint to prevent corrosion.
- 9) Enjoy your new RCI 16+ Toyota Tacoma Ditch Light Bracket Kit!

Share your new install with us on social media!

We love seeing our products out in the wild!

www.rcimetalworks.com

sales@rcioffroad.com

970-797-3089

REV: 1 | 02/16/2022

Created: AWM

