

RCI BED RACK AWNING MOUNT KIT INSTALLATION GUIDE

****This install guide is applicable our Bed Rack Awning Mount kits ONLY****



TOOLS REQUIRED:

Description
3/8" or 1/2" Socket Wrench and Socket Set
Metric Box-End Wrenches

INCLUDED HARDWARE:


Item	Description	QTY
H1.	5/16" x 1" Carriage Bolt	4 ea.
H2.	5/16" Washer	4 ea.
H3.	5/16" Nylon Lock-Nut	4 ea.
H4.	3/8" x 1" Carriage Bolt	4 ea.
H5.	3/8" Washer	4 ea.
H6.	3/8" Split-Washer	4 ea.
H7.	3/8" Hex Nut	4 ea.
H8.	Black 1/8" Nylon Spacer	2 ea.

INCLUDED COMPONENTS:

Item	Description	QTY
C1.	Angle Mounting Bracket	2 ea.
C2.	Awning Riser	2 ea.

INSTALLATION STEPS:

- 1) Begin by unpacking and removing all components and hardware. Please verify that all hardware, components, and mounting components are present. Please reference your original order invoice and verify all items are accounted for.
- 2) Begin installation by determining where the awning brackets will need to be placed to achieve the height and position the awning will occupy when open.
 - a. **PLEASE NOTE:** The awning mount requires a flat and even surface for both mounting bolts on the Angle Mounting Bracket(C1). The Black Nylon Spacers in this kit are intended to allow mounting of this kit with one mounting point off the edge of an RCI Bed Rack Side Panel. This spacer will be the same thickness as a side panel. Do **NOT** attach the awning mount kit to any surface by a single mounting point. *****RCI takes no responsibility for how the awning mounts are utilized or any damage that may occur from improper/insufficient mounting.*****
- 3) Once a mounting location has been selected, join one of each component together with two 5/16" x 1" Carriage Bolt(H1), 5/16" Washer(H2), and 5/16" Nylon Lock-Nut(H3). The Angle Mounting Bracket(C1) should be on the inside of the "C" bent in the Awning Riser(C2). Please account for the height and mounting location when adjusting the position of both components in relation to each other. The threads of the 5/16" Carriage Bolt(H1) should be pointed toward the bed rack when mounted. Fasteners should be hand tool tight.
- 4) Install one 3/8" Carriage Bolt(H4) through the square mounting hole on the Awning Mount assembly and hole present in the bed rack leg. The threads of this 3/8" carriage bolt should point to the center of the truck bed. Add one 3/8" Washer(H5), 3/8" Split-Washer(H6), and 3/8" Hex Nut(H7) on to the threads of the carriage bolt. Do **NOT** Tighten.
 - a. Repeat this step for the second square mounting hole.
 - b. Repeat step 4-4a for the second awning mount assembly.
- 5) With both awning mount assemblies in position on the rack, verify the position in relation to the awning you intend to mount. Once you are satisfied, tighten all four 3/8" carriage bolts holding the awning mount assemblies to the bed rack.
- 6) Enjoy your new RCI Bed Rack Awning Mount Kit for the RCI Adjustable Series Bed Racks!

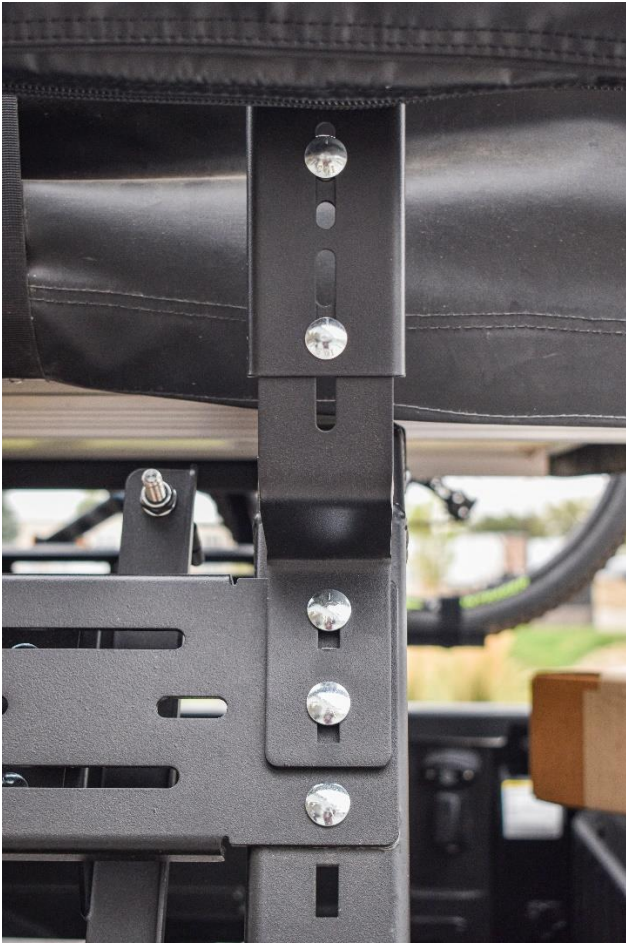

RCI OFF ROAD

**Share your new install with us on social media!
We love seeing our products out in the wild!**

www.rcimetalworks.com

sales@rcioffroad.com

970-797-3089

REV: 1 | 01/26/2022

Created: AWM

