


# RCI 5G T4R EXTERIOR MOLLE PANEL INSTALLATION GUIDE

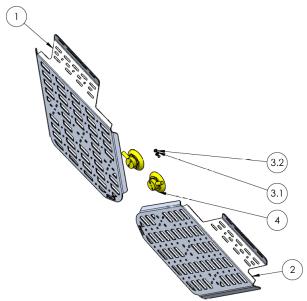

| ITEM NO. | DESCRIPTION                            |   |  |
|----------|--|---|--|
| 1        | 5G T4R Molle Panel - Driver            |   |  |
| 2        | 5G T4R Molle Panel - Passenger         | 1 |  |
| 3        | 5G T4R Molle Panel Hardware Kit        | 1 |  |
| 3.1      | 1_4-20 0.5in Flanged Button-head screw | 2 |  |
| 3.2      | 1/4 USS FLAT WASHER BLCK ZNC           | 2 |  |
| 4        | 4.5" SeaSucker- Black                  | 2 |  |

| UNLESS OTHERWISE SPECIFIED:   | PROPRIETARY AND CONFIDENTIAL  |             | NAME      | DATE     |
|---|---|-------------|-----------|----------|
|   |   | DRAWN       | KD        | 2/11/2   |
| DIMENSIONS ARE IN INCHES  | THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF RCI Offroad. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE |             |           |          |
| TOLERANCES: FRACTIONAL±0.010 ANGULAR: BEND ±0.5 TWO PLACE DECIMAL + 0.015 |   | Export Date |           |          |
| THREE PLACE DECIMAL ± 0.010   |   |             | 2/11/2025 |          |
|   | RCI OFFROAI   | D           |           |          |
| TITLE:  | 5G T4R Exterior Moll  | e Pane      | l         |          |
| llem Number<br>FG-00580 & FG  | -00581  |             |           | REV<br>1 |
|   | SCALE: 1:32 W   |             | CHEE      | T 2 OF 2 |



\*\*Use hand tools, impact wrenches may cause damage if over torqued.\*\*

## **Preparation**

1) Remove the bolts to the two most rearward cross bars on your RCI roof rack.



Figure 1: Hardware removal.



### **Installation**

- 2) Begin by unpacking and removing all components and hardware. Please verify that all hardware and mounting components are present. Reference your original order invoice and verify all items are accounted for.
- 3) Collect the hardware that was previously removed. Align the extrusion's threaded holes with the slot and bolt on the molle panel. Install the hardware.

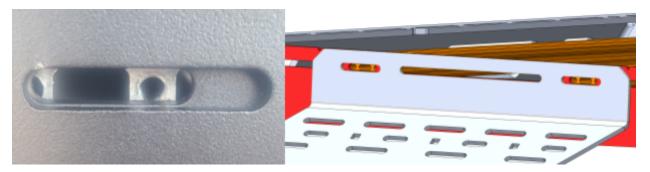


Figure 2: Upper hardware installation

4) Collect the two suction cups. Slide them up between the molle panel and the window to align with the depicted holes.

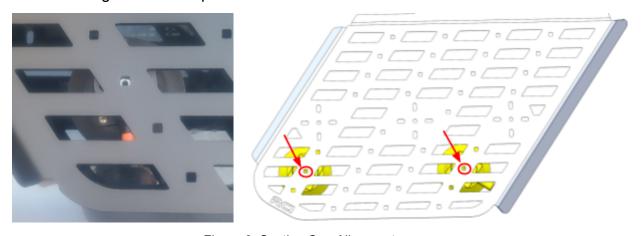


Figure 3: Suction Cup Alignment



- 5) Collect the provided  $\frac{1}{4}$ "-20 x  $\frac{1}{2}$ " bolts (2) and the  $\frac{1}{4}$ " washers (2). Install the hardware into the suction cups through the aligned holes and tighten.
  - a) Align the vacuum pump to point down where it is easiest to access.



Figure 4: Suction Cup Hardware Installation

- 6) To attach, press down slightly and pump until the orange indicator disappears. To remove, pull either tab on the vacuum pad upward and toward the center.
  - a) Check the seasucker suction indicator as needed.



Figure 5: Suction Cup Operation

Enjoy your new RCI accessory!



## Share your new install with us on social media! We love seeing our products out in the wild!



### www.rcimetalworks.com

### sales@rcioffroad.com

### 970-797-3089

REV: 1 | 9/29/2022





Disclaimer: The products sold by RCI Metalworks are intended for off –road use only, should not be modified, and are for use only on the vehicle(s) specifically stated. RCI Metalworks makes no warranties express or implied, including of fitness for a particular purpose or merchantability. RCI Metalworks will not be liable for any damages arising out of the use or misuse of its products. It is the customers' responsibility to ensure the products are safely and properly attached to the vehicle, and all products should be installed by trained professionals. We strive to maintain extremely high quality standards; however, all RCI Metalworks products are individually handcrafted, may vary slightly, and may contain minor imperfections. Due to the nature of raw aluminum, the material may have minor scratches and other blemishes caused by the manufacturing process, especially on the back side of product. RCI Metalworks is constantly seeking to improve its products and reserves the right to make changes to any product.